


DIRECTIONS FOR USE:
- TRIP-NO-MORE™ -
REORDER #2302 & 2303

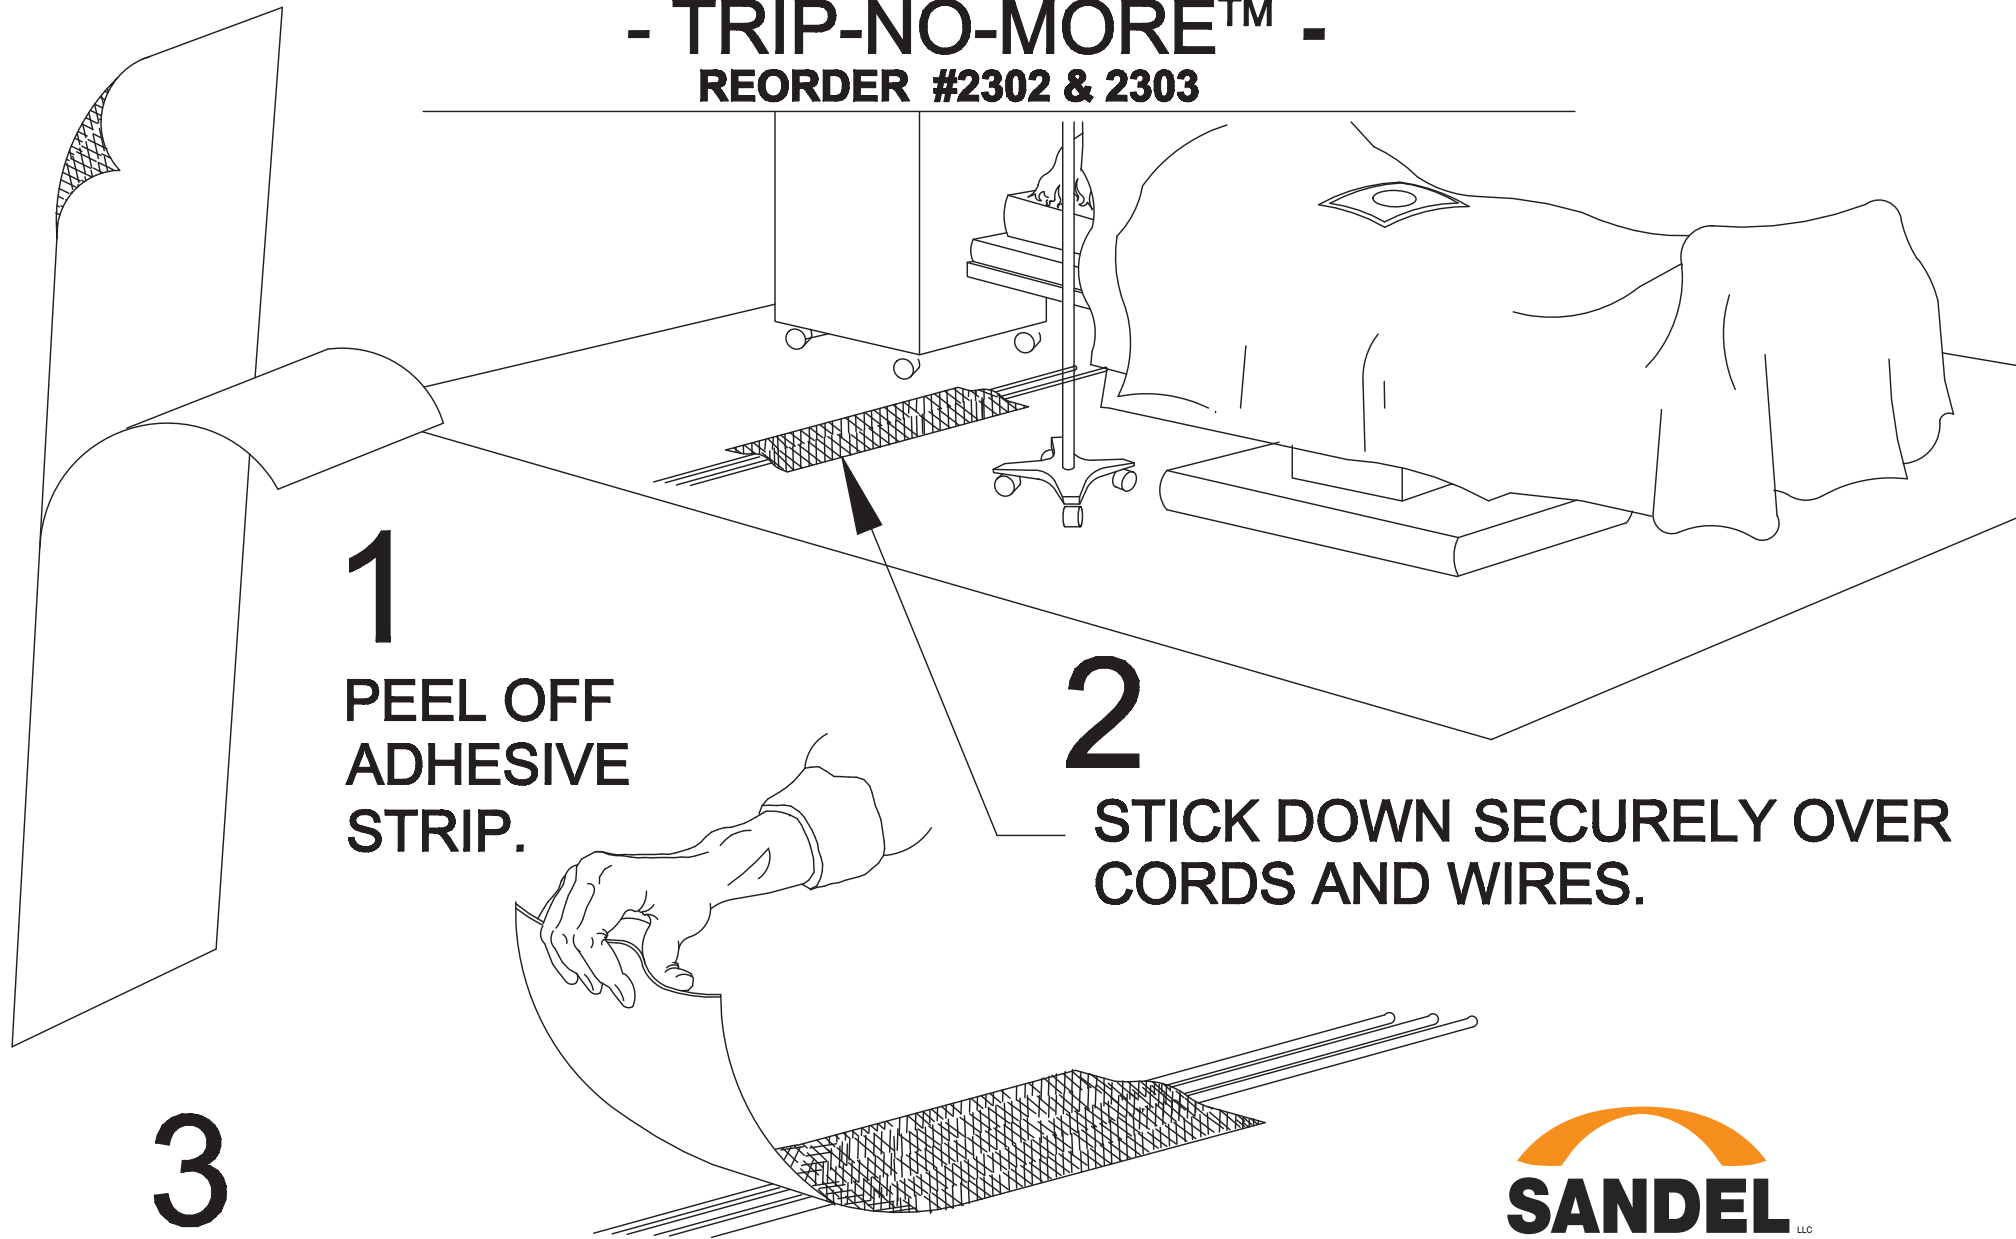

1
PEEL OFF
ADHESIVE
STRIP.

2
STICK DOWN SECURELY OVER
CORDS AND WIRES.

3
TO REMOVE, PULL UP
FROM EITHER END OF MAT.
(SINGLE USE ONLY)

SANDEL
the original exclusive sponsor of
AORN
Patient Safety First program.


SANDEL^{LLC}
Leaders in Healthcare Safety

Sandel Medical Industries, LLC
19736 Dearborn Street, Chatworth, CA 91311
tel: 818-534-2500 www.sandelmedical.com